
## **Parts List**

- 1. Back Deck
- 2. Rear plate
- 3. Rear grille
- 4. Upper louvres
- 5. Lower louvres
- 6. Capstan
- 7. Capstan top plate
- 8. Turret ring conversion plate
- 9. Top hatches
- 10. Top bins (optional)
- 11. Windscreen (optional)
- 12. Cable guide bars
- 13. Cable ends x4
- 14. Rear track guards
- 15. Exhaust fishtails
- 16. Wishbone towing frame
- 17. Towing eye A (upper)

B (lower)

- 18. Rear hard point
- 19. Front centre towing hard pointOption A or Option B
- 20. Hard point L/R
- 21. Track guard stowage bins L/R
- 22. Gun Planks L/R
- 23. Hardwood Blocks L/R
- 24. Fire Extinguisher x2

- 25. Small tool bin
- 26. A Frame
- 27. Front track guard extension L/R
- 28. Shackle
- 29. Tow cable connector Part A/Part B
- 30. 40 Ton shackle x2
- 31. Snatch block main body x2
- 32. Upper snatch block flanges
- 33. Lower snatch block flanges
- 34. Snatch block tail plate
- 35. Cam net
- 36. Antenna base
- 37. Roller Fairlead

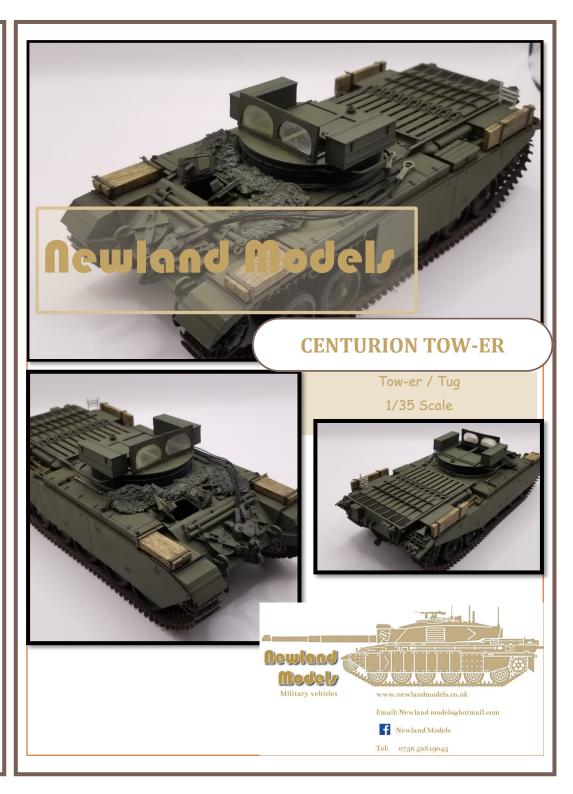

## **Cautions:**

Do not expose this kit or parts to extreme temperatures or a naked flame.

Please ensure when cutting or sanding you wear an appropriate face mask for your protection.

This kit and parts are not suitable for use as a toy due to small parts. Please ensure all parts, solvents and other equipment are stored safely out of the reach of both pets, children and anyone liable to be unsympathetic to your hobby!

## Tools:

Basics of a sharp scalpel, razor saw, sanding sticks, needle files, some pliers and tweezers.

## **INSTRUCTIONS:**

Check parts with the parts list on the back page.

Remove parts from the casting spru with a razor saw or scalpel.

Dry fit all parts before bonding. Bond with a very small amount of super glue.

 $Should\ parts\ be\ slightly\ warped,\ use\ very\ hot\ water\ or\ hot\ air\ to\ soften\ them\ and\ carefully\ amend\ the\ shape.$ 

Bubbles and slight imperfections are part of the casting process. These can be filled with either superglue and baking powder or purpose made product such as Milliput or similar.

The surface should be primed prior to painting.

Please contact us if you have any queries.















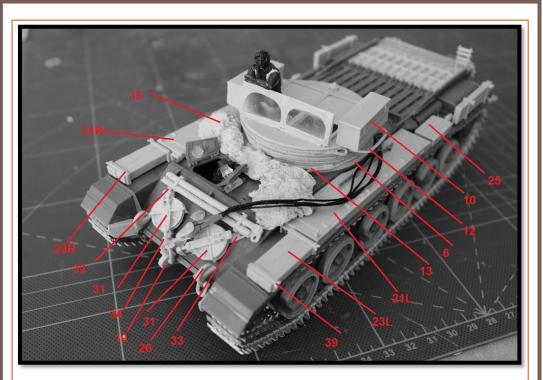


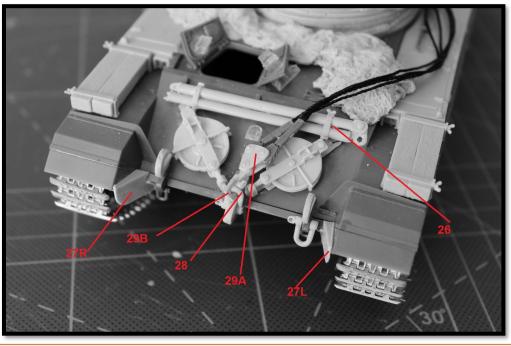

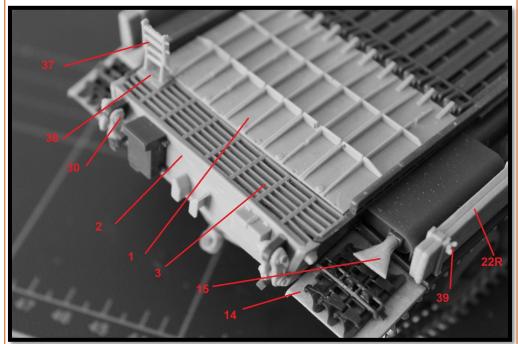

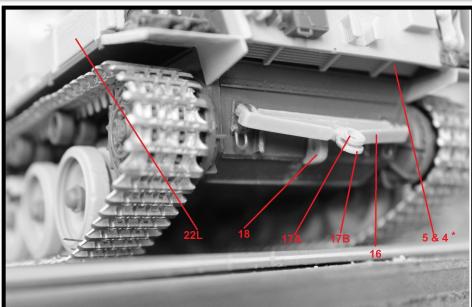

\*Part No 4 Upper Louvers are installed above.

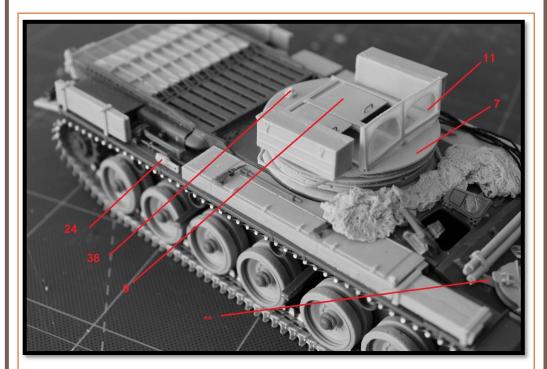

The tow-er built on Mk1 and Mk2 long hull did not have the gun rails installed.

\* (As wrongly depicted in some of these pictures).



Part 37 Roller Fairlead place as pictured