


Part 6 and 7 should not be glued until ploughs angle has been set. Then cut part 7 to required length.

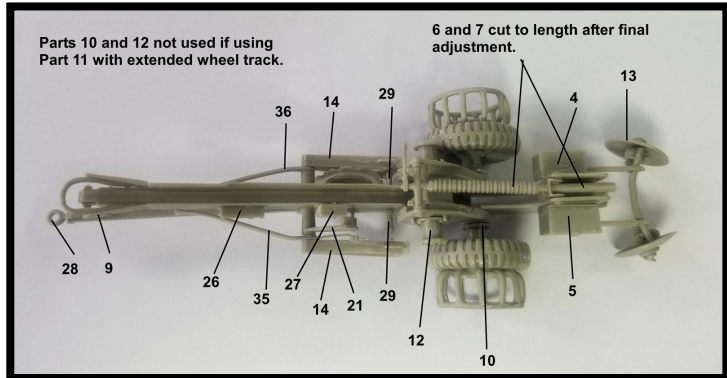

Parts 10 and 12 not used if using Part 11 with extended wheel track.
6 and 7 cut to length after final adjustment.

Mastered by: Andrew Crutchley

With thanks for your kind input:

David Green

David Sergent

Andreas Kirchoff

Wayne Dunbar





www.newlandmodels.co.uk

Email: Newland.models@hotmail.com



Newland Models

Tel: 0786 94819045

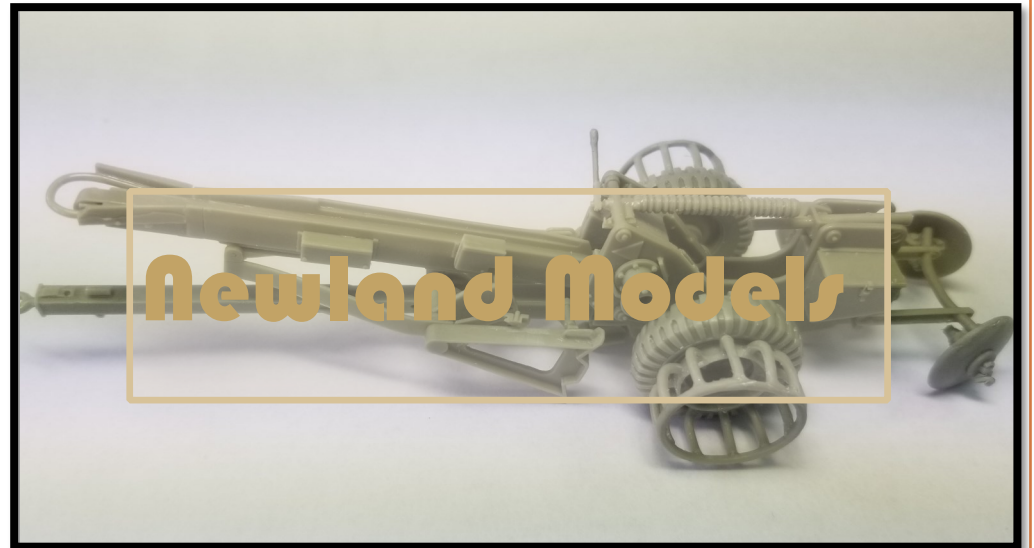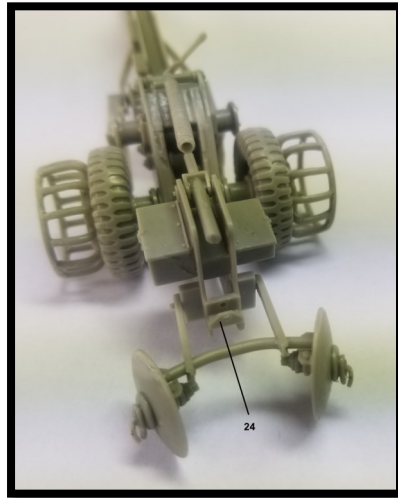

Barmine Layer

1/35 resin scale model

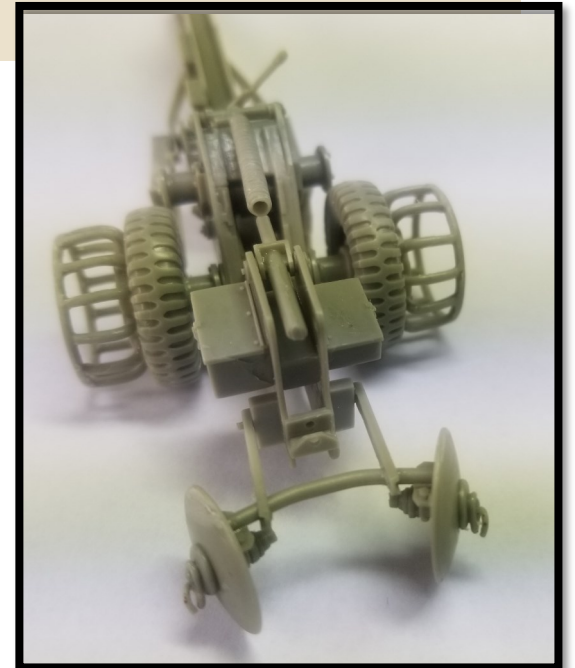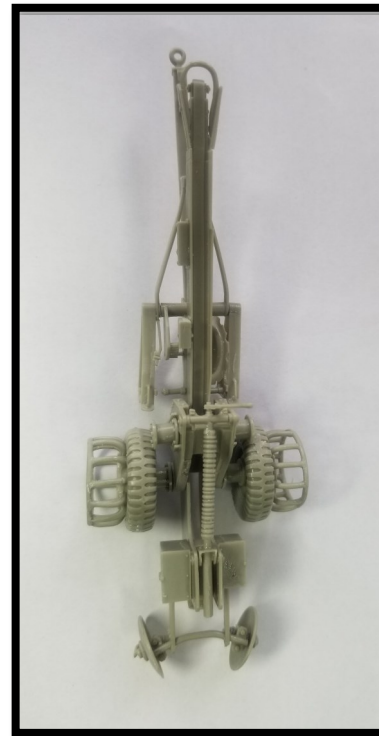

Cautions:

Do not expose this kit or parts to extreme temperatures or a naked flame.
Please ensure when cutting or sanding you wear an appropriate face mask for your protection.

This kit and parts are not suitable for use as a toy due to small parts. Please ensure all parts, solvents and other equipment are stored safely out of the reach of both pets, children and anyone liable to be unsympathetic to your hobby!

Tools:

Basics of a sharp scalpel, razor saw, sanding sticks, needle files, some pliers and tweezers.

INSTRUCTIONS:

- Check parts with the parts list on the back page.
- Remove parts from the casting spru with a razor saw or scalpel.
- Dry fit all parts before bonding. Bond with a very small amount of super glue.
- Should parts be slightly warped, use very hot water or hot air to soften them and carefully amend the shape.
- Bubbles and slight imperfections are part of the casting process. These can be filled with either superglue and baking powder or purpose made product such as Milliput or similar.
- The surface should be primed prior to painting.
- Please contact us if you have any queries.

