


Parts List

- | | |
|------------------------------------|---------------------------------------|
| 1. Back Deck | 25. Small tool bin |
| 2. Rear plate | 26. A Frame |
| 3. Rear grille | 27. Front track guard extension L/R |
| 4. Upper louvres | 28. Shackle |
| 5. Lower louvres | 29. Tow cable connector Part A/Part B |
| 6. Capstan | 30. 40 Ton shackle x2 |
| 7. Capstan top plate | 31. Snatch block main body x2 |
| 8. Turret ring conversion plate | 32. Upper snatch block flanges |
| 9. Top hatches | 33. Lower snatch block flanges |
| 10. Top bins (optional) | 34. Snatch block tail plate |
| 11. Windscreen (optional) | 35. Cam net |
| 12. Cable guide bars | 36. Antenna base |
| 13. Cable ends x4 | 37. Roller Fairlead |
| 14. Rear track guards | |
| 15. Exhaust fishtails | |
| 16. Wishbone towing frame | |
| 17. Towing eye A (upper) | |
| B (lower) | |
| 18. Rear hard point | |
| 19. Front centre towing hard point | |
| Option A or Option B | |
| 20. Hard point L/R | |
| 21. Track guard stowage bins L/R | |
| 22. Gun Planks L/R | |
| 23. Hardwood Blocks L/R | |
| 24. Fire Extinguisher x2 | |

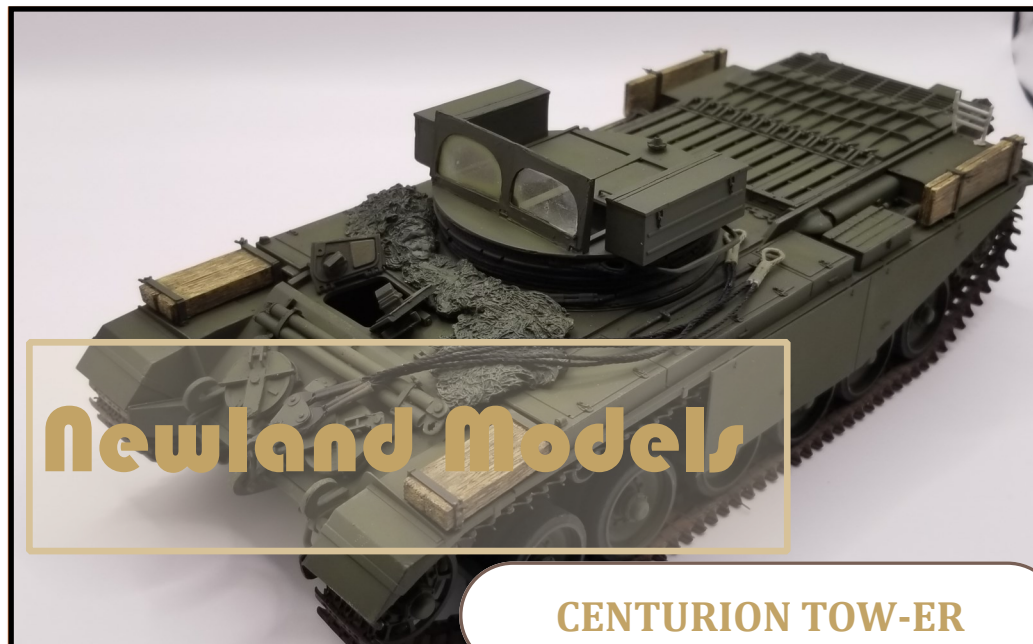

CENTURION TOW-ER

Tow-er / Tug
1/35 Scale



www.newlandmodels.co.uk

Email: Newlandmodels@hotmail.com

 Newland Models

Tel: 0756 52819045

Cautions:

Do not expose this kit or parts to extreme temperatures or a naked flame.

Please ensure when cutting or sanding you wear an appropriate face mask for your protection.

This kit and parts are not suitable for use as a toy due to small parts. Please ensure all parts, solvents and other equipment are stored safely out of the reach of both pets, children and anyone liable to be unsympathetic to your hobby!

Tools:

Basics of a sharp scalpel, razor saw, sanding sticks, needle files, some pliers and tweezers.

INSTRUCTIONS:

Check parts with the parts list on the back page.

Remove parts from the casting spru with a razor saw or scalpel.



Dry fit all parts before bonding. Bond with a very small amount of super glue.



Should parts be slightly warped, use very hot water or hot air to soften them and carefully amend the shape.



Bubbles and slight imperfections are part of the casting process. These can be filled with either superglue and baking powder or purpose made product such as Milliput or similar.

The surface should be primed prior to painting.


Please contact us if you have any queries.

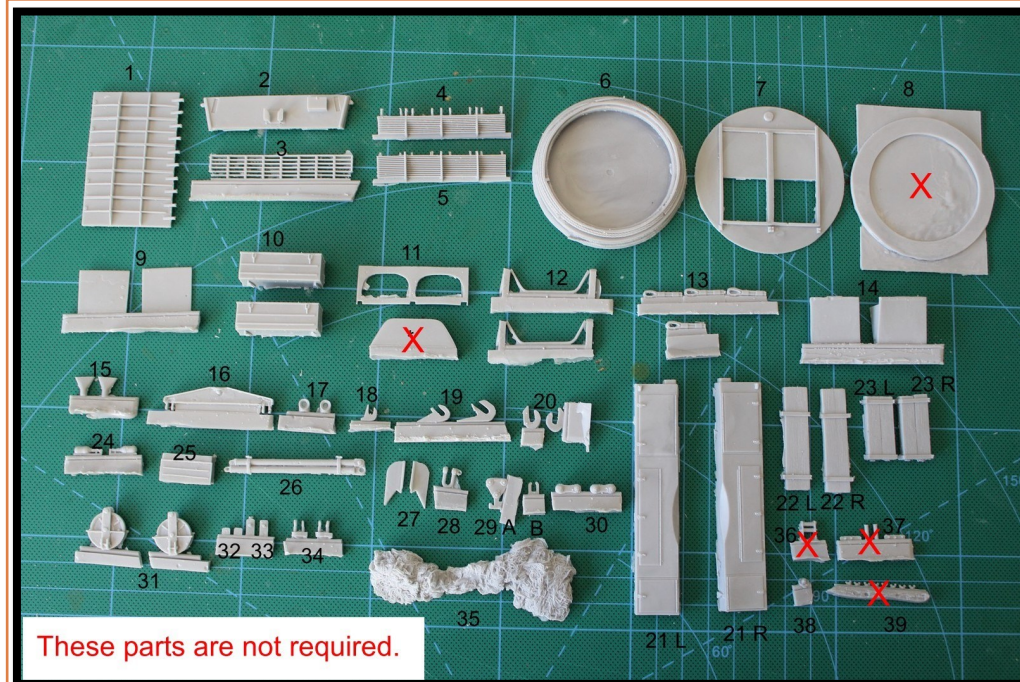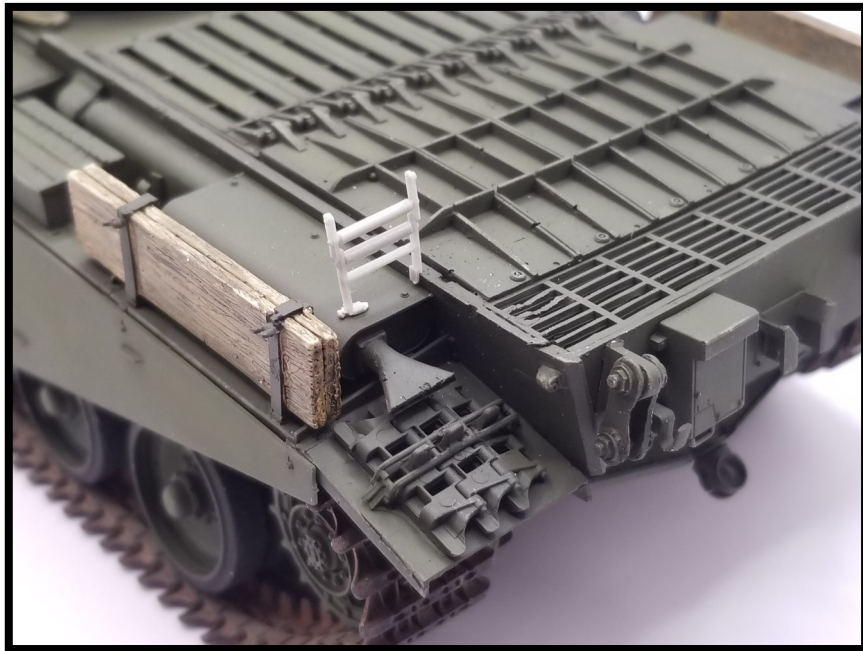

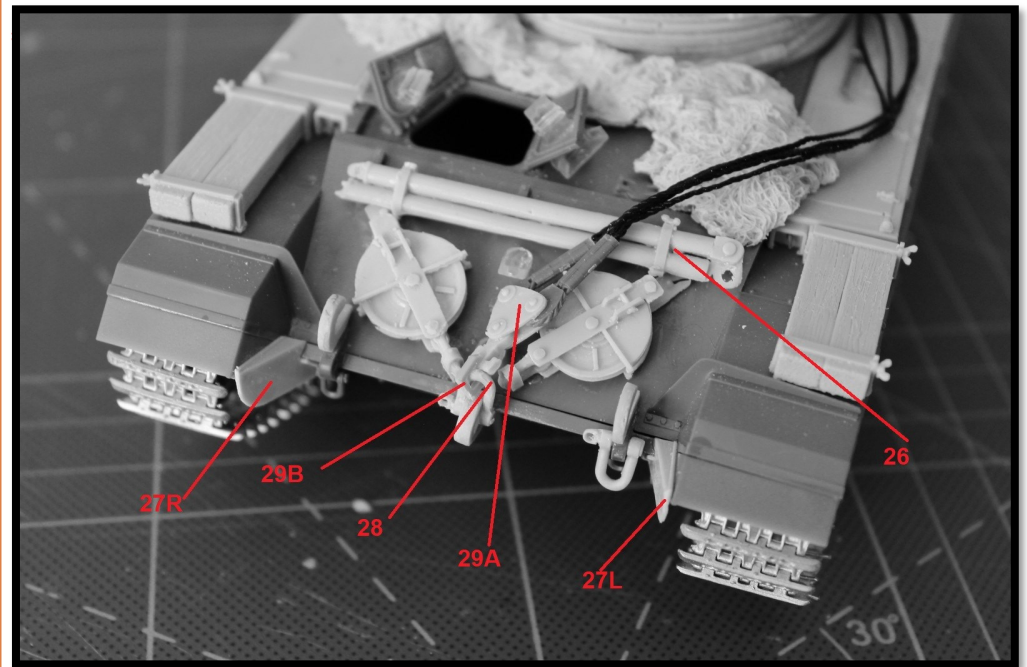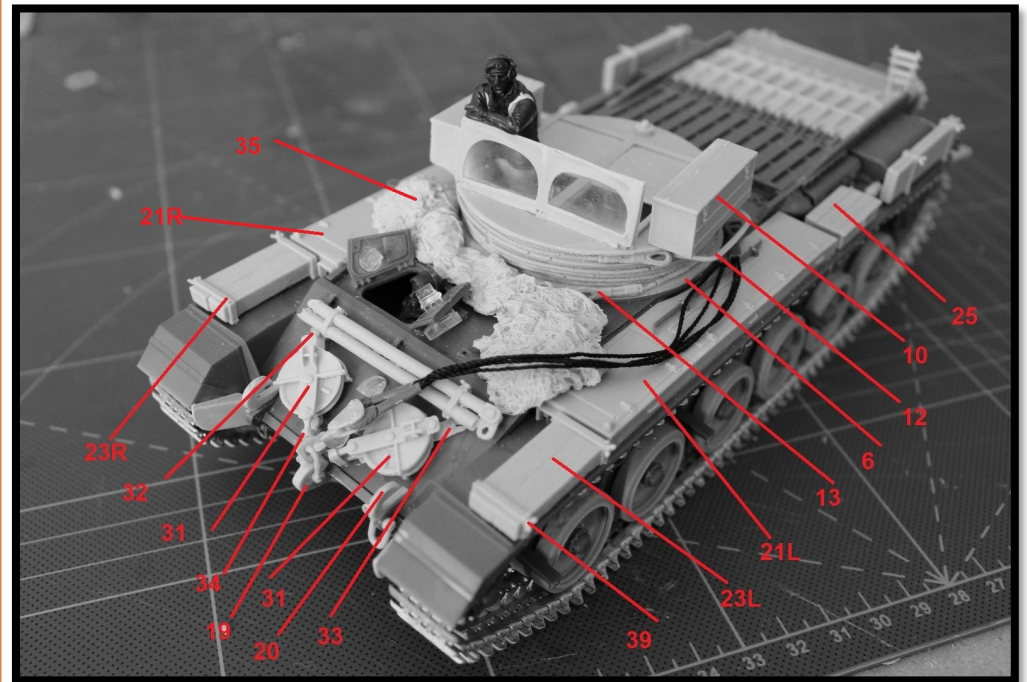

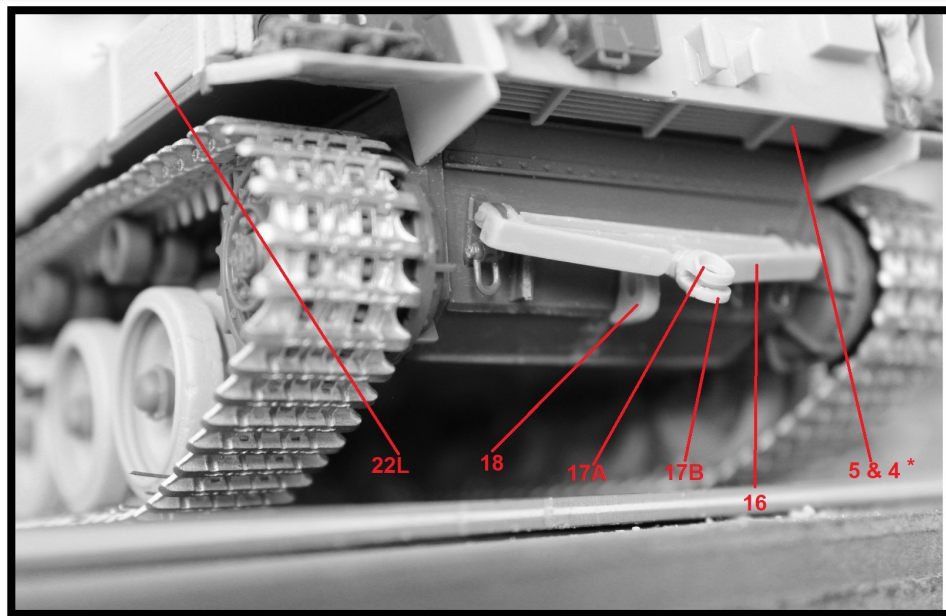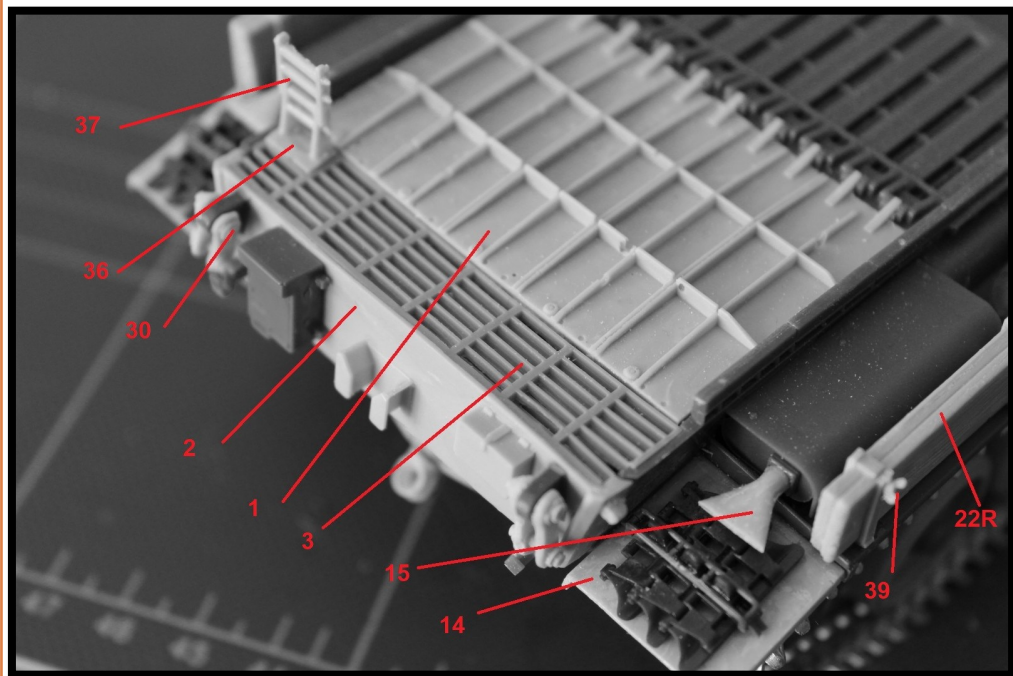


*Part No 4 Upper Louvers are installed above.

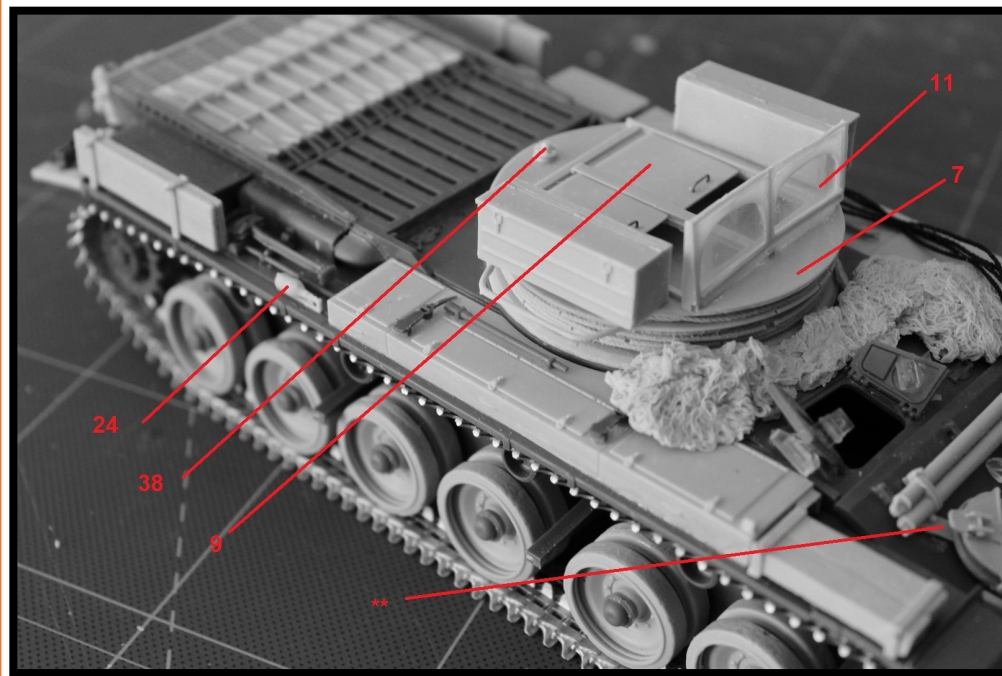

The tow-er built on Mk1 and Mk2 long hull did not have the gun rails installed.

* (As wrongly depicted in some of these pictures).

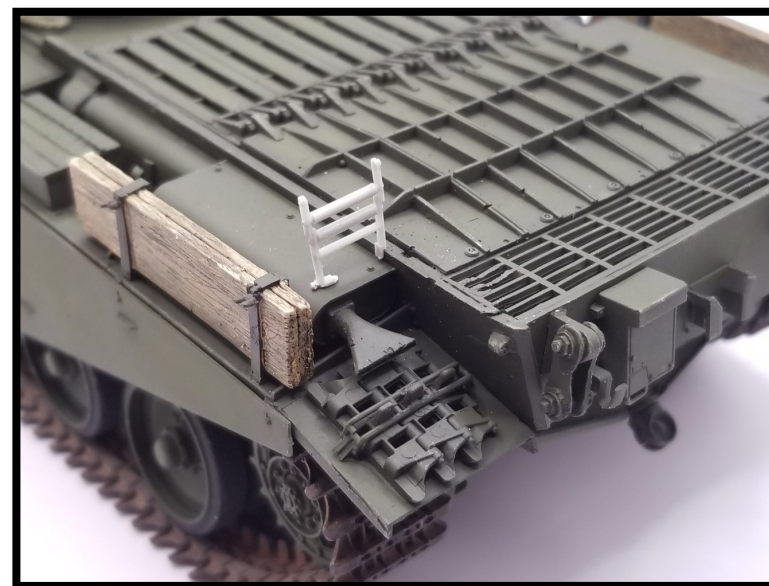

*Part 37 Roller
Fairlead place as
pictured*

Note: Some items may require warming in boiling water to reshape to the desired fit.

